PREMIER®

MANUAL DE INSTRUCCIONES
PROCESADOR DE ALIMENTOS
ED-5229

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
DESCRIPCIÓN 3
INSTRUCCIONES DE OPERACIÓN 3
LIMPIEZA Y MANTENIMIENTO 5
DIAGRAMA DE CIRCUITOS 6

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠ INSTRUCCIONES DE SEGURIDAD

- Apague y desconecte la unidad antes de intentar alcanzar alimentos en la jarra con sus dedos o con un objeto (por ejemplo, una espátula).
- Nunca utilice sus dedos ni ningún objeto diferente al “empujador” para empujar los ingredientes por el tubo de alimentación mientras la unidad está conectar.
- Tenga precaución al manipular las cuchillas y las piezas. Asegúrese de que la unidad está desconectada. Tenga especial cuidado cuando retire las cuchillas del recipiente o la jarra.
- La unidad no debe ser utilizada por personas con capacidades físicas o mentales reducidas, o falta de habilidad o experiencia, a menos que tengan estricta supervisión por parte de una persona responsable.
- Mantenga la unidad fuera del alcance de los niños.
- La unidad está diseñada para uso doméstico. No la utilice en exteriores.
- Verifique que el voltaje de la unidad corresponde con el del área donde la va a conectar.
- No deje la unidad funcionando sin atención.
- La unidad no debe ser operada con ningún tipo de interruptor externo, como por ejemplo un temporizador, ni conectada a un circuito que se apague con frecuencia, con el fin de evitar daños.
- Cuando utilice la unidad por vez primera, tal vez perciba un ligero olor y un poco de humo. Esto significa que el exceso del recubrimiento se está calentando al interior de la unidad. Esto es totalmente normal y no representa ningún daño. Terminará en unos cuantos minutos. (En caso de observar de que el humo continúa por más de 15 minutos, por favor póngase en contacto con el área de servicio al cliente).
- No utilice la unidad si observa que el cable de poder o el enchufe están dañados.
- Si el cable de poder se daña debe ser reemplazado por personal calificado.
- Apague y desconecte la unidad antes de quitar o poner cualquier accesorio.
- Recuerde desconectar la unidad tan pronto como termine de utilizarla.
- Espere hasta que las partes móviles se detengan antes de retirar la tapa del recipiente o la jarra.
- No exceda el contenido máximo indicado en el recipiente o en la jarra.
- Esta unidad está únicamente diseñada para el procesamiento de alimentos.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

DESCRIPCIÓN

1. Empujadores
2. Tubo de alimentación
3. Tapa para el recipiente de procesamiento
4. Recipiente de procesamiento
5. Eje Impulsor
6. Base del Procesador
7. Espátula
8. Cuchilla en acero inoxidable para picar
9. Cuchilla de plástico para mezclar
10. Batidor
11. Molino seco con tapa de filtro
12. Disco para tajadas gruesas y julianas
13. Disco para tajadas finas y julianas
14. Disco para papas fritas
15. Disco para triturar
16. Exprimidor

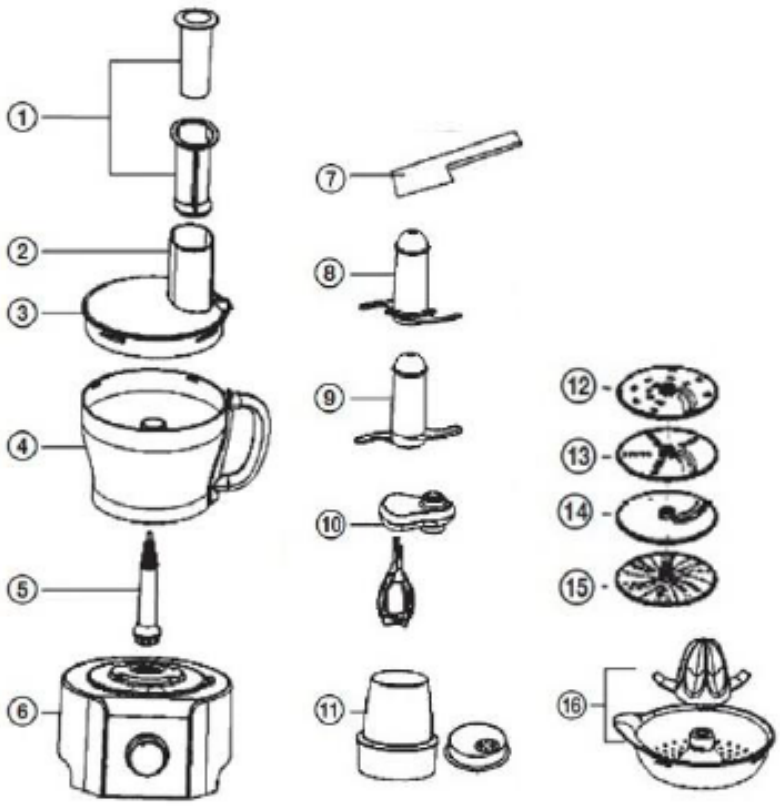

INSTRUCCIONES DE OPERACIÓN

ANTES DE COMENZAR
Limpie completamente todas las partes que entran en contacto con los alimentos antes de utilizar la unidad por vez primera. Después de haber colocado las partes que necesita en la Base del Procesador, puede conectar el cable de poder.

PROCESAR
Controlar la velocidad del procesamiento es muy sencillo:

Procesamiento continuo o a la velocidad deseada: Gire el Dial de Control en el sentido de las manecillas del reloj para seleccionar la velocidad que necesite. Regrese a la posición “0” para detener el motor.

Procesamiento corto: Gire y mantenga del Dial de Control en el sentido contrario a las manecillas del reloj a la posición “P” para un procesamiento corto. Suelte el botón para detener la unidad.

Nota: Para garantizar la longevidad de la unidad, asegúrese que esta no funcione por mas de 3 minutos seguidos. Permita que el motor de enfríe antes de usarla nuevamente

CUCHILLAS

Utilice las cuchillas de plástico para mezclar harina o pasta.

Utilice las cuchillas de acero inoxidable para hacer tortas y pasteles, picar carne cruda o congelada, vegetales, nueces, paté, salsas, hacer puré de sopa y para hacer migajas de pan o galletas. La cantidad de tiempo en que se procesa el alimento con las cuchillas de acero inoxidable determinará la textura que se logre. Para texturas más gruesas utilice el control de pulso.

Nota: No utilice la cuchilla para mezclar harina.

PREPARAR EL PROCESADOR PARA CORTAR O MEZCLAR

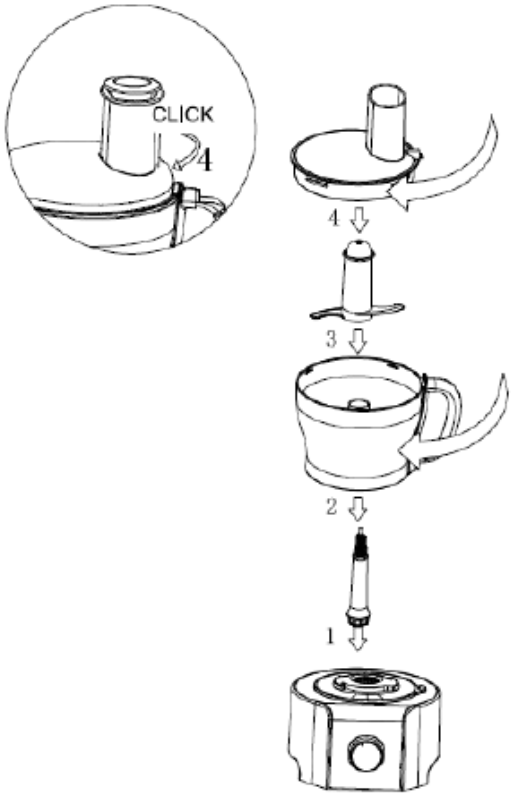

1. Coloque el Eje Impulsor en la Base del Procesador.
2. Asegure el Recipiente de Procesamiento en la Base del Procesador girándola en el sentido de las manecillas del reloj.
3. Coloque la tapa en el Recipiente de Procesamiento, luego gire en el sentido de las manecillas del reloj para bloquear la jarra hasta que escuche un clic.
4. Coloque los alimentos preparados en la tolva de alimentación, y si es necesario, utilice el Empujador. (Recuerde no utilizar los dedos para empujar los alimentos, ni otros objetos distintos al empujador).
5. Seleccione una velocidad o utilice el control de pulso.

Nota

Antes de procesar carne, córtela en pedazos de 3x3 cm. No coloque más de 1 kilo de carne en el recipiente.

BATIDOR

Utilice el batidor para mezclar claras de huevo y leche condensada y para batir pasta de huevos y azúcar para ponqués.

Para garantizar la longevidad de la unidad, asegúrese que esta no funcione por mas de 3 minutos seguidos. Permita que el motor de enfríe antes de usarla nuevamente

MOLINO SECO

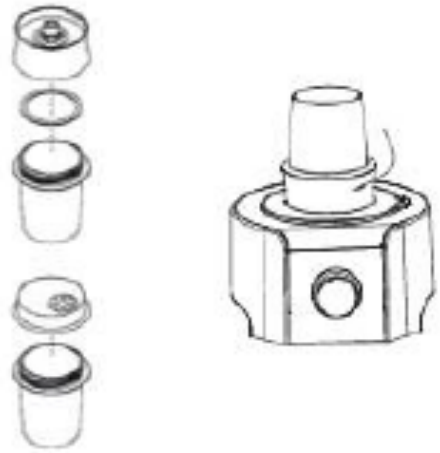

1. Utilice el molino seco para moler hierbas, nueces y granos de café.
2. Coloque el material en el recipiente del molino. Llene la mitad del espacio.
3. Coloque el anillo de cierre en la base del molino seco.
4. Gire la base del molino boca abajo y con las cuchillas hacia abajo cúbralo con el recipiente del molino.
5. Ajústelo en el recipiente y apriete con firmeza.
6. Coloque ahora el molino en la base del motor y gírelo para asegurarlo.
7. Encienda a la máxima velocidad o utilice el botón de pulso.
8. Después de moler, usted puede cambiar las cuchillas por la tapa y usar el recipiente directamente para rociar los alimentos.

Para garantizar la longevidad de la unidad, asegúrese que esta no funcione por mas de 3 minutos seguidos. Permita que el motor de enfríe antes de usarla nuevamente

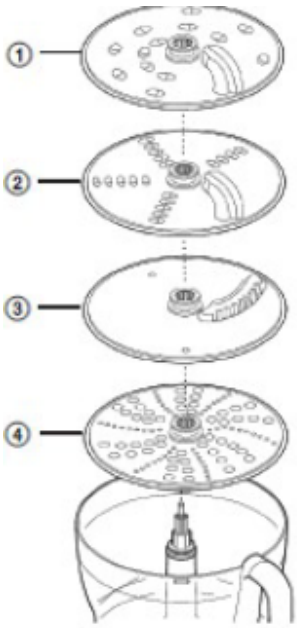

DISCOS

- Utilice el disco de dos caras grueso para obtener tajadas y julianas gruesas, y el disco delgada, para tajadas y julianas delgadas. Con estos discos puede tajar zanahorias, papas, repollo, cocombros, calabacín, remolacha, cebolla y queso.
- Utilice el disco para cortar papas fritas, frutas y vegetales. Con este disco puede preparar papas fritas, ensaladas de vegetales, aderezos y vegetales para freír.
- Utilice el disco para triturar con quesos duros, zanahorias, papas y otros alimentos con estructura similar.

EXPRIMIDOR

Utilice el exprimidor para obtener jugo de frutas cítricas, como por ejemplo naranjas, limones, toronjas, etc.

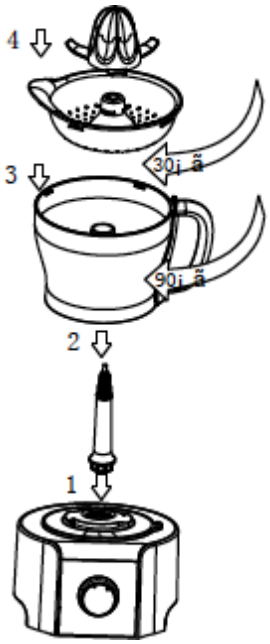

LIMPIEZA Y MANTENIMIENTO

- Apague y desconecte la unidad antes de limpiarla.
- Manipule las cuchillas con precaución.
- Algunas frutas pueden decolorar el plástico. Esto es normal y no dañan de ninguna forma el plástico ni afectan el sabor de las comidas. Para llevar a cabo la limpieza utilice una prenda suave humedecida con aceite vegetal para retirar esta decoloración y limpiar las superficies que están en contacto con los alimentos.
- Para limpiar la Base del Procesador utilice una prenda seca.
- Para limpiar las otras partes de la unidad (que no sean la Base), lávelas con agua y jabón. Seque por completo antes de guardarlas.

DIAGRAMA DE CIRCUITOS

Voltaje AC110V/60Hz
Potencia 600W

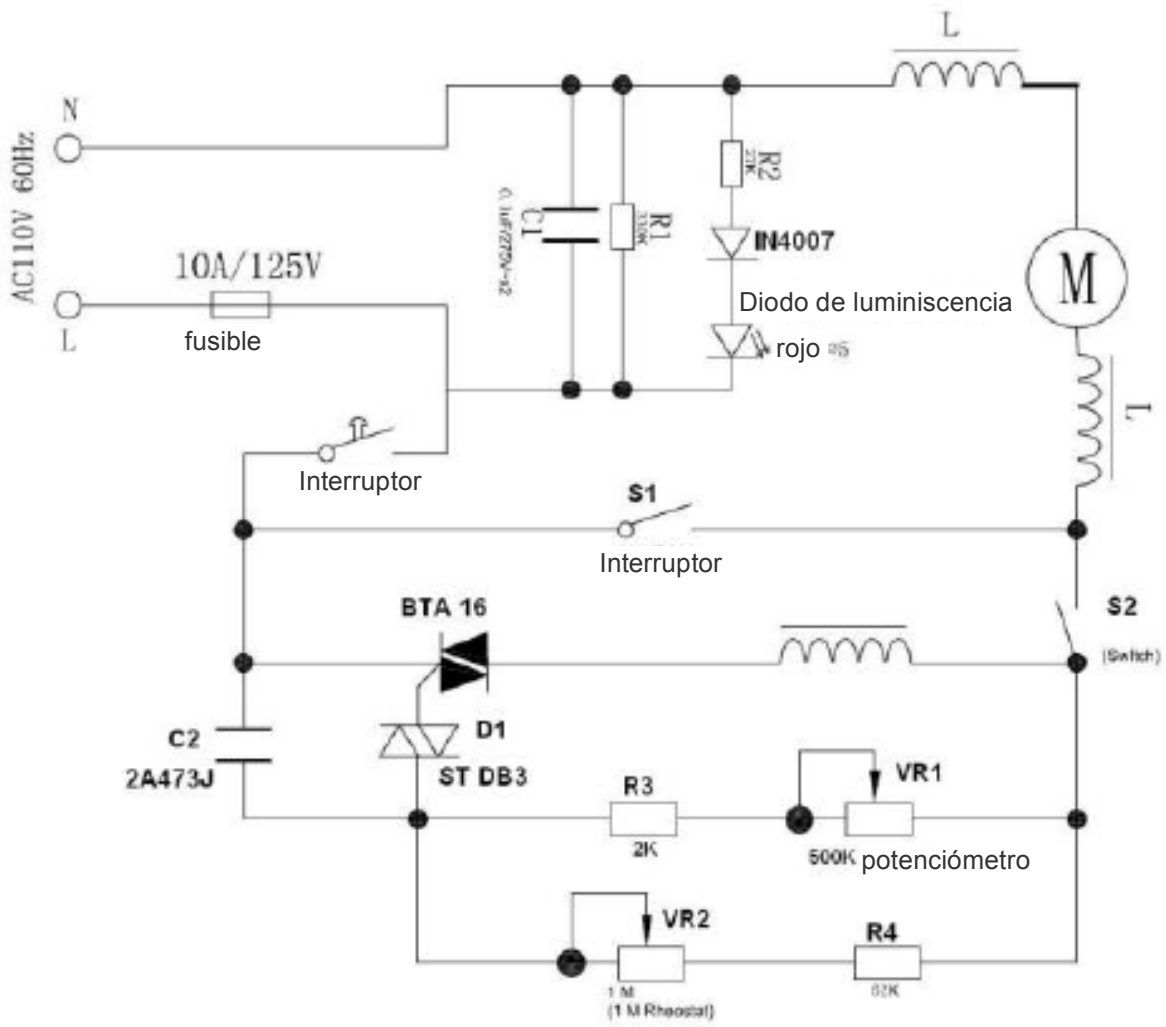

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL
FOOD PROCESSOR

ED-5229

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Important Safety Instructions

Read this user manual carefully before you use the appliance and save it for future reference.

- Always turn off and unplug the appliance before you reach into the blender jar with your fingers or an object (e.g. a spatula).
- Never use your fingers or any object other than the provided 'pusher' to push ingredients down the feed tube while the appliance is plugged in.
- Be very careful when you handle the blades or inserts; make sure the product is first unplugged. Be especially careful when you remove them from the bowl or jar, when you empty the bowl or jar and when you clean them. Their cutting edges are very sharp.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance.
- The appliance is for indoor, household use only. Keep the appliance out of the reach of children.
- Do not allow children to use the appliance without supervision.
- Check that the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Never let the appliance run unattended.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Your appliance, on first use, may emit light smoke and some odour for a little while; this is just the excess coating being heated off the inside of the appliance. This is not cause for concern, and should stop after a few minutes. [If there is still smoke after 15 mins of continuous use, please contact Customer Service for assistance]
- Do not use the appliance if the mains cord, the plug or other parts are damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off the appliance by turning the control knob to 0. Switch off the appliance before you detach or attach any accessory.
- Unplug the appliance immediately after use.
- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap.
- Wait until moving parts stop running before you remove the lid of the bowl or jug.
- Do not exceed the maximum content indicated on the bowl or the blender jug.
- Care must be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- The accessories provided are for use with this machine only. The machine is intended for processing food only.

Overview

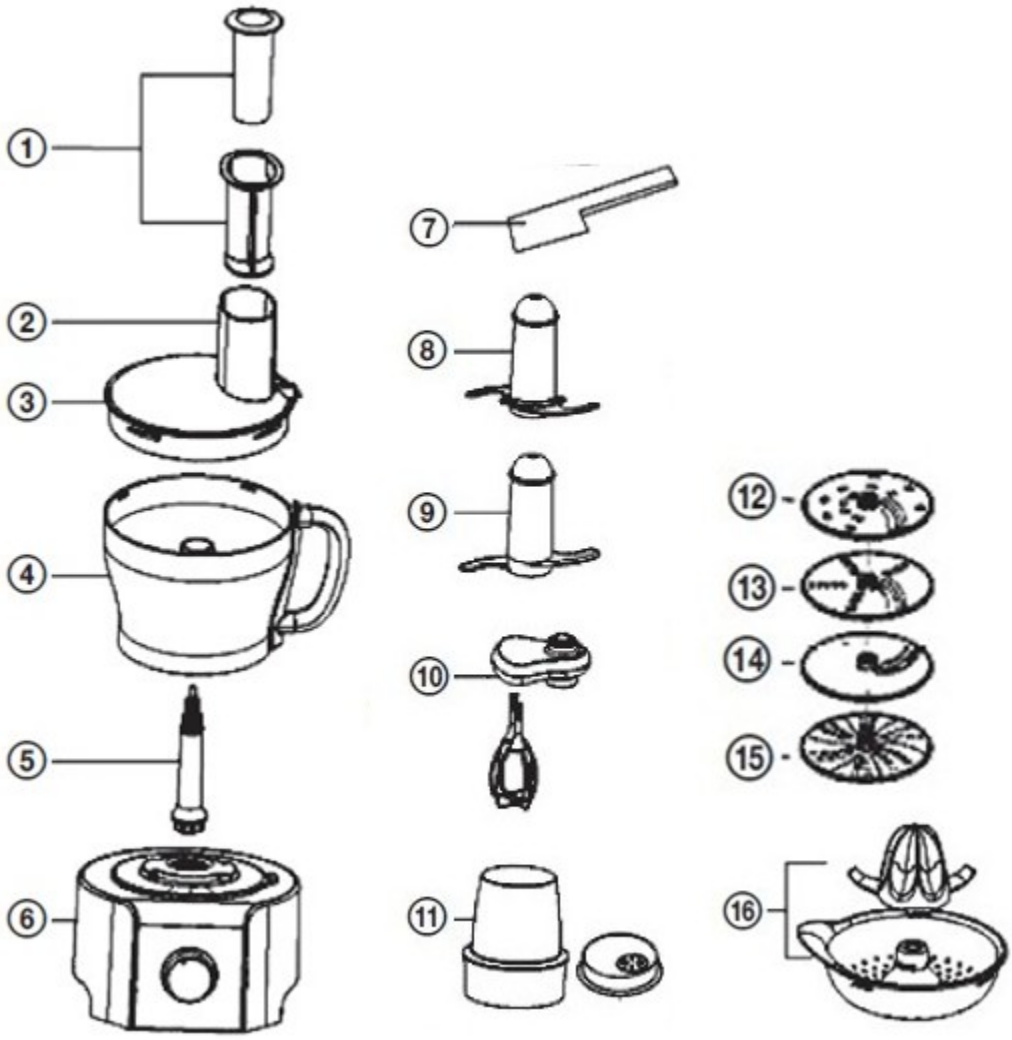

1) Pushers
2) Feed tube
3) Lid for processing bowl
4) Processing bowl
5) Drive shaft
6) Processor base
7) Spatula
8) Stainless steel blade for chopping
9) Plastic blade for mixing
10) Mixing whisk
11) Dry Mill with filter lid
12) Disc for coarse slicing and julienne
13) Disc for fine slicing and julienne
14) Disc for potato chips cutting
15) Disc for shredding
16) Citrus Press

Using your Food Processor

Note: Thoroughly clean the parts that come into contact with food before you plug in and use the Food Processor for the first time.

When you have attached the parts you need to the Processor Base, it is safe to plug in the power plug.

Controlling the processing speed is simple:
For continuous processing, or processing at desired speed: turn the Control Dial clockwise to the desired speed*. Turn back to '0' position to stop the motor.
For short bursts: Turn and hold the Control Dial anti-clockwise to 'P' position for a short burst of processing. Release the Control Dial to stop; it will automatically go back to the '0' position.

IMPORTANT
* To ensure longevity of the unit, do not let it run continuously for more than 3 minutes. Let the motor cool down prior to using it again.

- **Using the stainless steel chopping blade / plastic mixing blade**

Use the plastic mixing blade to mix flour/dough.

Use the stainless steel chopping blade for cake and pastry making, chopping raw and cooked meat, vegetables, nuts, pate, dips, pureeing soups and to also make crumbs from biscuits and bread.
The length of the processing time with the stainless steel chopping blade will determine the texture achieved. For coarser textures use the pulse control.

Note: Do not use the chopping blade for mixing flour.

Preparing the processor for chopping / mixing:
1. Insert the Drive Shaft into the Processor Base.
2. Secure the Processing Bowl onto the Processor Base by turning clockwise.
3. Put either the Chopping Blade or the Mixing Blade onto the Drive Shaft and press it to the end.
4. Place the lid on the Processing Bowl, then turn clockwise to lock onto the jug till you hear it click.
5. Feed the prepared food into the feed chute – if necessary, push the food in with the provided Pusher.
NOTE: Do not push food in with your fingers, utensils or anything other than the provided pushers.
6. Select a speed or use the pulse control.

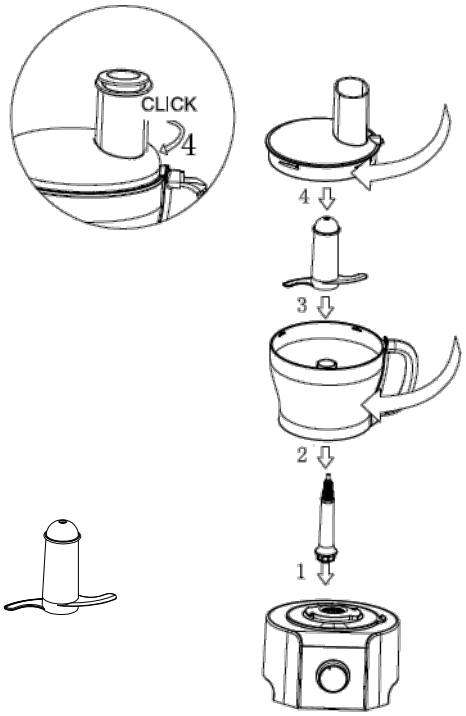

NOTE: Before processing meat, please cut into max.3x3cm pieces. **Never put more than 1000g (i.e. 1kg) of meat into the Bowl.**

- **Using the** Mixing Whisk

Use for light whipping of mixture of egg whites and condensed milk and for whipping sponge cake dough from eggs and sugar.
Heavir mixtures with fat and flour would damage the beater.

To ensure longevity of the unit, do not let it run continuously for more than 3 minutes. Let the motor cool down prior to using it again.

- **Using the** Dry Mill

Use the mill to grind herbs, nuts and coffee beans.

1. Place the material in the bowl of the mill. Fill half the space at most.
2. Place the sealing ring on the base of the dry mill.
3. Turn the base of the mill upside down and with the blades turned downward cover with it the bowl of the mill.
4. Screw it on the bowl and tighten firmly by hand.
5. Set the assembled mill on the base with the motor and turn it to secure it.
6. Switch to maximum speed or use the pulse mode.
7. After grinding, you can change the base with blades for the lid with the filter lid and use it directly to sprinkle food.
   To ensure longevity of the unit, do not let it run continuously for more than 3 minutes. Let the motor cool down prior to using it again.

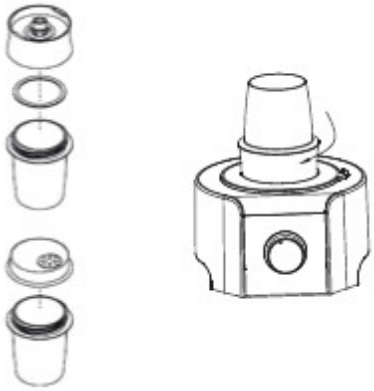

- **Using the** Stainless Steel Discs

1. Double-sided disc for coarse slicing and julienne
2. Double-sided disc for fine slicing and julienne
   Use the slicing disc for slicing carrots, potatoes, cabbage, cucumbers, zucchinis, beets and onions and to slice cheeses.
3. Disc for cutting potato chips, fruits and vegetables
   Use the disc to prepare fine French fries, vegetable salads, garnishes and vegetables for stir-fry.
4. Disc for shredding
   Use the disc for hard cheeses, carrots, potatoes and other foods with similar structure.

To ensure longevity of the unit, do not let it run continuously for more than 3 minutes. Let the motor cool down prior to using it again.

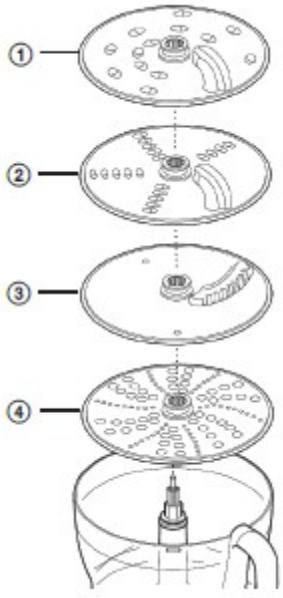

- **Using the** Citrus Press

Use the citrus fruit press to obtain juice from citrus fruit
(e.g. oranges, lemons, limes and grapefruits).

To ensure longevity of the unit, do not let it run continuously for more than 3 minutes. Let the motor cool down prior to using it again.

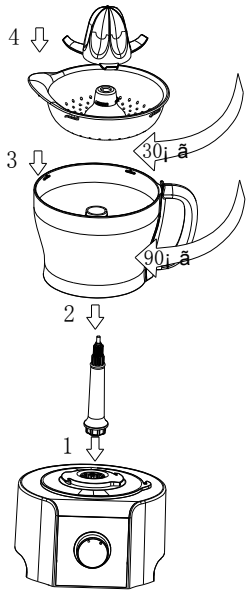

Cleaning & Maintenance

● ***Always switch off the appliance and unplug the power plug before cleaning.***
● Handle the blades and cutting discs with care - they are extremely sharp.
● Some foods may discolour the plastic. This is perfectly normal and won't harm the plastic or affect the flavor of your food. Rub with a cloth dipped in vegetable oil to remove the discoloration and clean the surfaces which in contact with food.
● Cleaning the Processor Base: wipe clean with a dry cloth.
● Cleaning other parts of the appliance (apart from the Processor Base): Carefully wash by hand under water, then wipe clean with a cloth. Dry thoroughly with another dry cloth before storing the appliance and accessories.

NOTE: This appliance is noisy during use – we suggest using ear protection for peace of mind.

VOLTAGE : AC110V/60Hz
POWER : 600W

Circuit diagram